www.brberg.ru brberg@ya.ru Тел. (499) 703-31-61



Hydraulics

Linear Motion and Assembly Technologies

Pneumatics


Service



Integrated Measuring System

for Ball and Roller Rail Systems

R310EN 2350 (2007.07)

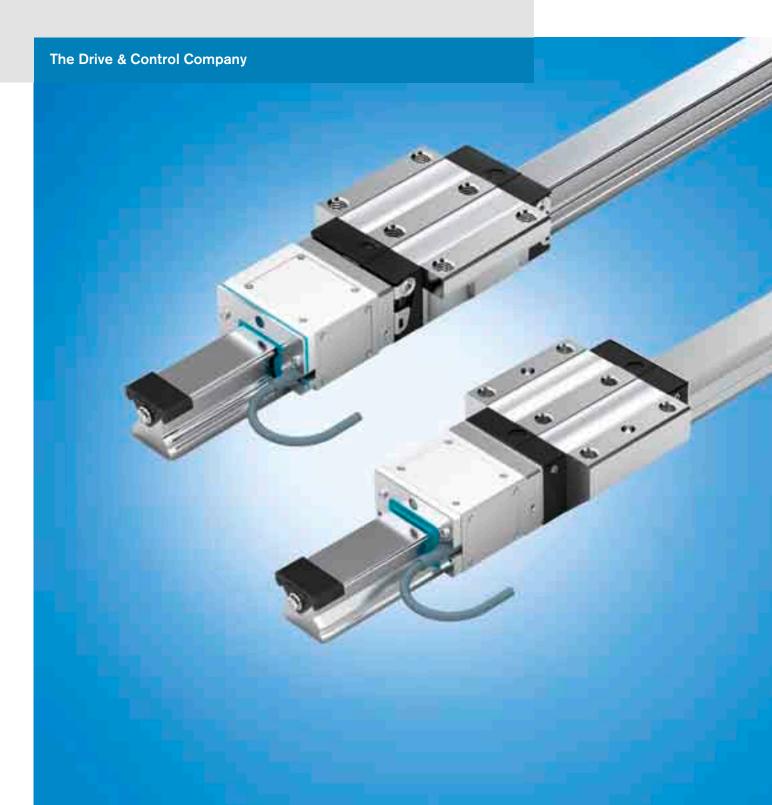

Linear Motion and Assembly Technologies

Ball Rail Systems Roller Rail Systems Linear Bushings and Shafts

Ball Screw Drives Linear Motion Systems Basic Mechanical Elements Manual Production Systems Transfer Systems



www.boschrexroth.com/brl

Integrated Measuring System for Ball and Roller Rail Systems

Product Overview	4
Standard range	6
Technical Data	7
Electrical data	10
Test Report Part 1 and Part 2	12
Ordering System	13
Integrated Measuring System for Ball Rail Systems	14
Steel Ball Runner Blocks	14
Steel Ball Guide Rails	16
Integrated Measuring System for Roller Rail Systems	18
Steel Roller Runner Blocks	18
Steel Roller Guide Rails	20
Electrical Accessories	22
Mounting Instructions for Ball and Roller Runner Blocks	23
Maintenance Instructions	25
Order Examples	26
Inquiry/Order Form	27

Product Overview

Rexroth Ball Rail and Roller Rail Systems can be supplied with an integrated, inductive linear measuring system. This development combines the guiding and measuring functions in one unit and opens up new opportunities in machine design. In a word: Mechatronics in practice

Highlights:

Integrated Measuring System

- The guide system and the measuring system form one unit, building on standard guide elements.
- No additional space is required, except possibly in the longitudinal direction to accommodate the scanner
- No external mounting surfaces required for measuring systems
- No measuring inaccuracies due to deviations in parallelism between the measuring system and the guideway
- Easy retrofitting and replacement

Inductive Measuring System

- Contact-free scanning ensures zero maintenance
- Resistant to water, oil, dust, shavings, etc.
- Insensitive to magnetic fields
- Virtually indestructible
- One-piece guide rails:

Standard length up to 4000 mm,

On request up to 4500 mm


- Several scanners can be mounted on one rail

Incremental Measuring Principle

- Precise position detection through a high-precision scale paired with distance coded reference marks or with a single reference mark.
- High resolution, up to 0.25 μm

Guide rail with integrated scale

- Same mounting pattern as standard guide rails
- Choice of single reference mark or distance coded reference marks over the entire rail length, covered by a laser-welded stainless steel strip

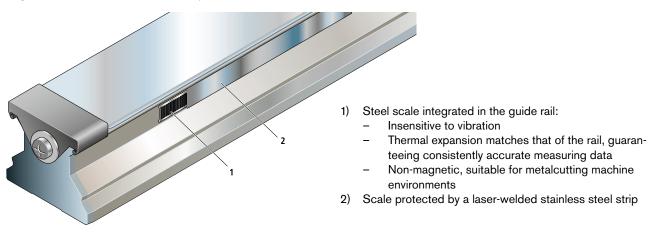


www.brberg.ru brberg@ya.ru Тел. (499) 703-31-61

R310EN 2350 (2007.07) | Integrated Measuring System for BRS and RRS

Integrated Measuring System for Ball and Roller Rail Systems

- Same mounting hole pattern as standard runner blocks
- Installation requirements: Scanner fastening screws must be accessible and there must sufficient clearance at the end of the rail for pulling the scanner off.
- Adapter plate allows scanner to be replaced during servicing (by Rexroth service engineers) without removing the runner block.

For more information on Ball and Roller Rail Systems, please refer to the respective main catalog.

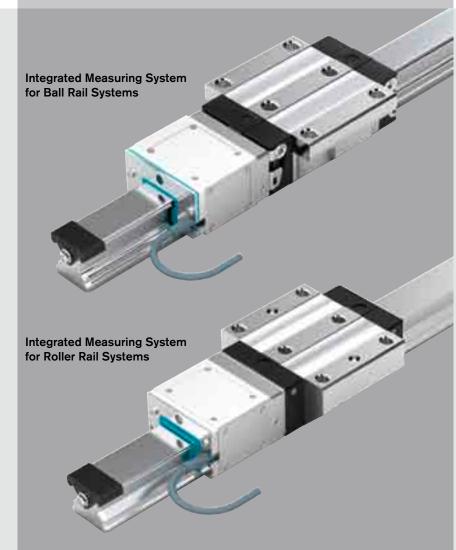

Product Overview

Standard range

Ball runner blocks		Size				
		20	25	30	35	45
FNS	Signal type	1 V _{pp} / TTL				
	Accuracy class	Р	Р	Р	P	P
R1651	Preload	0.02 / 0.08 C	0.02 / 0.08 0			
	Signal type	1 V _{pp} / TTL				
FLS	Accuracy class	Р	Р	Р	P	P
R1653	Preload	0.02 / 0.08 C				
SNH	Signal type	-	1 V _{pp} / TTL			
R1621	Accuracy class	-	Р	P	P	P
R 1621	Preload	-	0.02 / 0.08 C			
SNS	Signal type	1 V _{pp} / TTL				
R1622	Accuracy class	Р	Р	Р	Р	Р
R1622	Preload	0.02 / 0.08 C				
SLS	Signal type	1 V _{pp} / TTL				
	Accuracy class	Р	Р	Р	Р	Р
R1623	Preload	0.02 / 0.08 C				
SLH R1624	Signal type	-	1 V _{pp} / TTL			
	Accuracy class	-	Р	Р	Р	Р
	Preload	-	0.02 / 0.08 C			

Other accuracy and preload classes on request

Roller runner blocks		Size			
		35	45	55	65
FNS	Signal type	1 V _{pp} / TTL			
R1851	Accuracy class	SP	SP	SP	SP
	Preload	0.08 / 0.13 C			
FLS	Signal type	1 V _{pp} / TTL			
R1853	Accuracy class	SP	SP	SP	SP
	Preload	0.08 / 0.13 C			
SNH	Signal type	1 V _{pp} / TTL	1 V _{pp} / TTL	1 V _{pp} / TTL	-
R1821	Accuracy class	SP	SP	SP	-
	Preload	0.08 / 0.13 C	0.08 / 0.13 C	0.08 / 0.13 C	-
SNS	Signal type	1 V _{pp} / TTL	1 V _{pp} / TTL	1 V _{pp} / TTL	-
R1822	Accuracy class	SP	SP	SP	-
	Preload	0.08 / 0.13 C	0.08 / 0.13 C	0.08 / 0.13 C	-
SLS	Signal type	1 V _{pp} / TTL	1 V _{pp} / TTL	1 V _{pp} / TTL	-
R1823	Accuracy class	SP	SP	SP	-
	Preload	0.08 / 0.13 C	0.08 / 0.13 C	0.08 / 0.13 C	-
SLH	Signal type	1 V _{pp} / TTL			
R1824	Accuracy class	SP	SP	SP	SP
	Preload	0.08 / 0.13 C			

Accuracy class P on request

Codes for design styles of all the available runner blocks

FNS =	Flanged, normal, standard height
-------	----------------------------------

- FLS = Flanged, long, standard height
- SNH = Slimline, normal, high
- SNS = Slimline, normal, standard height
- SLS = Slimline, long, standard height
- SLH = Slimline, long, high

Guide rails

For mounting from above, with cover strip and protective caps For mounting from above, with plastic mounting hole plugs

Definition Design style		Code (exa	e mple)	1
		F	Ν	S
Width	Flanged	F		
	Slimline			
Length	Normal		Ν	
	Long			
Height	Standard height			S
	H igh			

www.brberg.ru brberg@ya.ru Тел. (499) 703-31-61

Technical Data Scale

The scale (1), a high precision graduated steel strip, is welded into a groove on the guide rail and protected by a rust-proof-laser-welded stainless-steel band (2).

The scale used by Rexroth is produced on a specially designed machine and has the following features:

- Pitch of 1000 μm,
- Same thermal expansion coefficient as the guide rail
- $\begin{array}{l} \alpha_{Therm}\approx 11\cdot 10^{-6}\ K^{-1}\\ \ Max.\ measuring \ length: \\ M_L = L (2x30\ mm)\\ For \ manufacturing \ reasons, \ the \ measuring \ length \ is \ shorter \ than \ the \ rail \ length \ by \ 30\ mm \ at \ each \ end \ of \ the \ rail. \end{array}$

Reference marks

When scanned, the scale itself delivers only ascending or descending numerical values (incremental signals): incremental measuring principle.

Distance-coded reference marks


In order to be able to approach a specific position, an absolute reference point is necessary.


This reference point is achieved by **distance-coded reference marks** that are machined into the guide rail on the side opposite the scale, to deliver a reference mark signal. The reference marks are also protected by a tightly welded stainless-steel band. The side with reference marks is identified by a hole drilled into the reference edge of the guide rail (3).

The advantage of distance coded reference marks is that an absolute positioning signal is available as soon as the sensor on the runner block has passed two reference marks.

Single, absolute reference mark


The location of the reference mark may be defined as desired by the customer, but must remain within the measuring range. If the reference mark coincides with a rail mounting hole, it must be shifted up to 8 mm. (Dimension X, see diagram.)

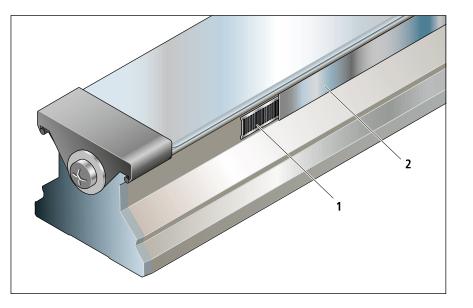

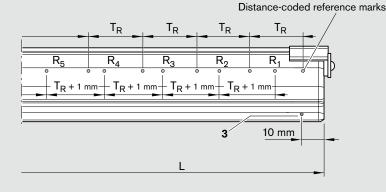



Distance coding of reference marks (mm)	
L _{max}	T _R
800	40
2400	70
4000	90

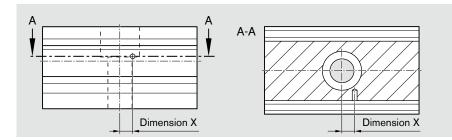

Integrated Measuring System for BRS and RRS | R310EN 2350 (2007.07)

Product Overview

Technical Data	Resolution with TTL signal Repeatability Interpolation accuracy (at 5 V and 20°C)	0.25; 1; 2; 2; ±3; 3;	5; 5; 3;	
	Max. travel speed	5 m/s at resolutic 0.5 m/s at resolu 1 m/s at resolutic	tion 0.25 μm	
	Vibration (55 – 2000 Hz)	\leq 100 m/s ²		
	Shock (11 ms)	\leq 500 m/s ²		
	Max. rail length (one-piece)	4000 mm (stand 4500 mm (specia		
	Enclosure protection class (EN 60529)	IP 67		
	Operating temperature	0 to 50°C		
	Storage temperature	–10 to 70°C		
	Power supply	5 V ^{+5%} -3%		
	Current consumption			(mA)
		1 V _{pp} : TTL 5 μm; 10 μm:		200
		TTL 0.25 μm; 1 μm	:	420
	Voltage drop		Standard	
	per meter of cable length		cable	cable (m)/(m)
		1 V _{pp} :	(mV/m) 54	(mV/m) 17
		TTL 5 μm; 10 μm:	120	38
		TTL 0.25 μm; 1 μm	130	42

Maximum length of extension cable

25 m

Accuracy of the measuring	
system	

The accuracy of the measuring system is made up of the following components: – Scale pitch accuracy + guideway accuracy (pitch accuracy)

- Deviation of the interpolation (\pm 3 μ m)

The sums of the deviations are summarized in the term system accuracy.

Definition of pitch accuracy:

The pitch accuracy is the maximum deviation from the mean of any position over a measuring distance of 1m, expressed in \pm a (µm).

Four different pitch accuracies are available: (ref. temp. 20°C):

- ±3 μm
- ±5 μm
- ± 10 μm
- ± 30 μm

A detailed **accuracy report** can be provided on request.

A sample report is shown on page 12.

When ordering:

The pitch accuracy is selected by stating the appropriate code in the guide rail part number.

System accuracy	Scale pitch and guideway (µm)	Interpolation (µm)	System accuracy (μm)
	± 3	± 3	± 6
	± 5	± 3	± 8
	± 10	± 3	± 13
	± 30	± 3	± 33
		•	

Product Overview

Electrical data

Output signals

- Analog sinusoidal voltage signals (1 V_{pp}) or,

Digital square-wave output signals (RS 422)
 Both signal outputs are equipped with evaluation electronics in real-time mode so that highly dynamic drives can be served.

Analog output signals

Sinusoidal signals 1 V_{pp}

Incremental signals

The sinusoidal incremental signals A and B are phase-shifted 90° relative to each other and have a typical signal amplitude of 1 V_{pp} .

Signal amplitude: A, B = 1 V_{pp} (±0.1 V)

The illustrated output signal sequence (B phase-lagged to A) relates to motion of the scanner in the positive counting direction (see graph).

Reference mark signal


The differential reference mark signal RI has an amplitude of approx. -1 V when inactive (low).

In the active state (high), the amplitude is +1 V.


The stated amplitudes apply for operation with a terminating resistor $Z_0 = 120 \Omega$. (See interface circuitry)


Interface circuitry

R_A	=	47 Ω
Z ₀	=	120 Ω
Uo	=	2.5 V

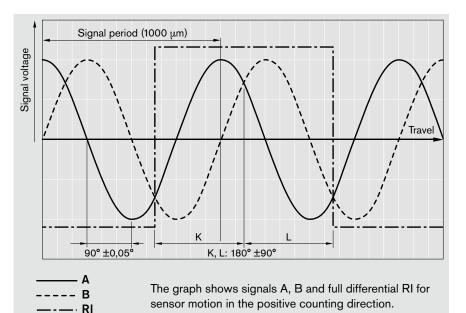



 

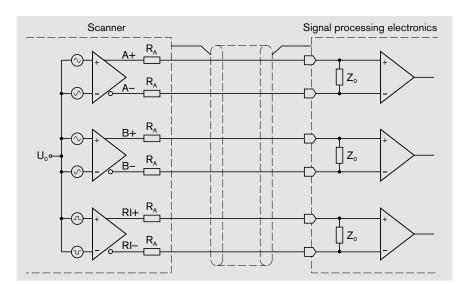

Digital output signals

Square-wave TTL output signals through an integrated interpolation unit

Incremental signals

The digital incremental signals A and B comply with the EIA/TIA-422-A standard. They are 90° phase shifted and have the following signal levels: $U_{high} > 2.5 V$ $U_{low} < 0.5 V$ The switching response times are ≤ 100 ns at a capacitative load of \leq 1000 pF.

Reference mark signal

The differential reference mark signal RI has the same electrical characteristics as the incremental signals. The delay for evaluation of the incremental signals A, B and the reference mark signal is td \leq 0.1 μ s.


The stated amplitudes apply for operation with a terminating resistor $Z_0 = 120 \Omega$. (See interface circuitry)

Resolution and Interpolation

 
Measuring systems with digital output signals are available with resolution rates of 0.25 μm, 1 μm, 5 μm, 10 μm. Example: An interpolation factor of 25 yields a signal period of 40 μ m. The signal period is divided by 4, reflecting the 4-edge evaluation of the incremental signals A and B. This results in a resolution of 10 µm.

Interface circuitry


 $\begin{array}{rcl} {\sf R}_{\sf A} &=& 47 \ \Omega \\ {\sf Z}_0 &=& 120 \ \Omega \\ {\sf U}_0 &=& 2.5 \ {\sf V} \end{array}$

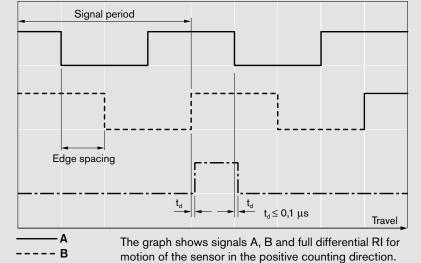







Resolution (edge spacing)	Signal period	Max. scanner travel speed	Interpolation factor (1 mm grid scale)
(μm)	(µm)	(m/s)	
10.00	40	5.0	25
5.00	20	5.0	50
1.001)	4	1.0	256
0.25 ²⁾	1	0.5	1024
1) $\frac{1000 \mu m}{4 \times 256} = 0.976$	μ m 2) $\frac{1000\mu m}{4 \times 1024} = 0.244 \mu m$		

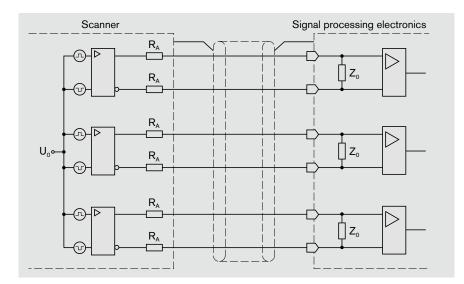


Test Report Part 1 and Part 2 (accuracy reports)

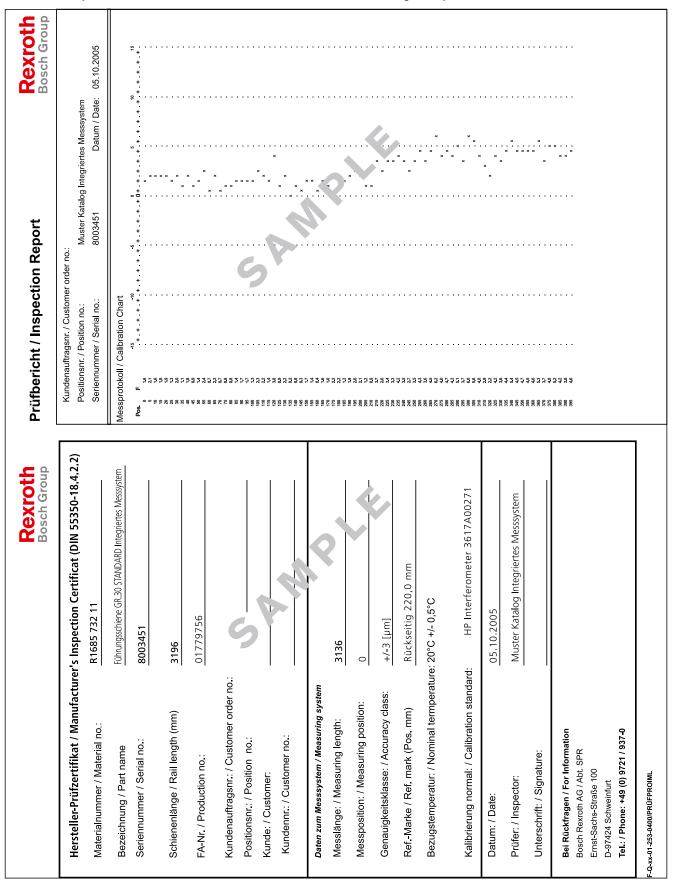

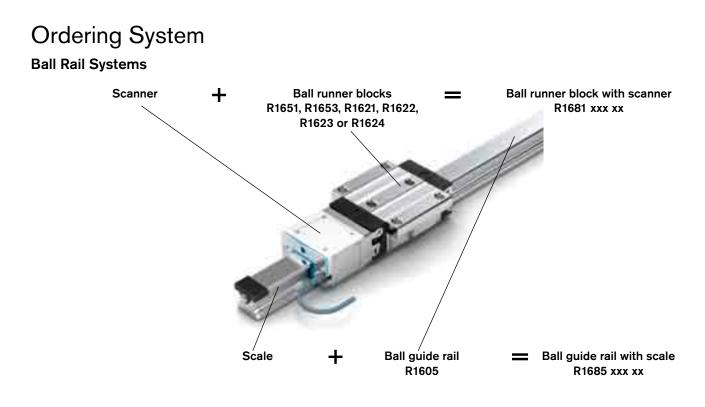

When Ball Rail Systems are ordered with integrated measuring system, the part number (PN) changes. A ball runner block with PN R1651, R1653, R1621, R1622, R1623 or R1624 is then given the PN R1681 to indicate that the scanner has been mounted. A similar procedure is followed when ordering the ball guide rail. The PN changes from R1605 to R1685 to indicate that the scale has been incorporated.

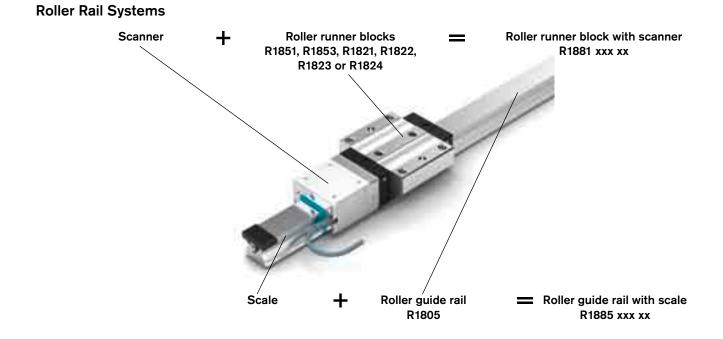

When Roller Rail Systems are ordered with integrated measuring system, the part number (PN) changes. A roller runner block with PN R1851, R1853, R1821, R1822, R1823 or R1824 is then given the PN R1881 to indicate that the scanner has been mounted. A similar procedure is followed when ordering the roller guide rail. The PN changes from R1805 to R1885 to indicate that the scale has been incorporated. Integrated Measuring System for BRS and RRS | R310EN 2350 (2007.07)

Integrated Measuring System for Ball Rail Systems

Steel Ball Runner Blocks

Preload class C1 (2% C), C2 (8% C) Accuracy class P

FNS R1651



FLS R1653





SLH R1624





Ball runner block version

* not in size 20

FNS..... = 51

FLS = 53

 SNH *.....
 =
 21

 SNS

 =
 22

 SLS

 =
 23

 SLH *

 =
 24





Part number

Note:

Please refer to the sections "Ordering System" and "Order Examples."

R 16 x x x 2 x x

	20 = Without ball chain
	22 = With ball chain
2 =	=Accuracy class P
1 =	Preload C1 (2% C)
2 =	Preload C2 (8% C)
	0
	Size
7 =	
4 =	

Codes for runner block design styles

- **FNS** = Flanged, normal, standard height
- **FLS** = Flanged, long, standard height
- **SNH** = Slimline, normal, high
- **SNS** = Slimline, normal, standard height
- **SLS** = Slimline, long, standard height
- SLH = Slimline, long, high

R310EN 2350 (2007.07) | Integrated Measuring System for BRS and RRS

Scanner Options

Mounting side		Signal	type ar	nd re	solu	ition	Cable length 1)	Connector ²	2)	Protec class	tion
Reference edge		1 V _{pp}	TTL (ım)			max.	12-pin Conn	ei	IP 67	IP 67
Ball runner block							3000 mm				plus 3)
Scale	Scale		0.25	1	5	10	Preferred	Connector	Coupling		
1	1						length	male	male		
Reference edge at top	Reference edge at bottom						1000 mm	contacts	contacts		
01	02	01	02	03	04	05		01	02	01	02

1) For cable length 3 m: voltage drop of 0.3 V

2) For precise details of connectors, see the section on Electrical Accessories.


3) IP 67 and resistant to metalworking fluids (tested with Curtis S90)

Recommendation for cable lengths:

For cable lengths > 1 m use extension cable R1688 090 20 (see Accessories catalog).

Dimensions of ball runner blocks with integrated measuring system

To allow replacement, the scanner is mounted to the runner block via an adapter plate.

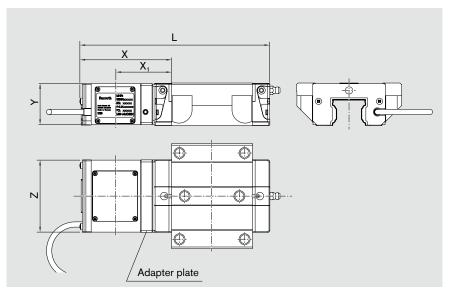

Size Dimensions (mm)

0120	Dimensions	(11111)				
	L ⁵⁾	L ⁶⁾	Х	X ₁ ⁴⁾	Y	Z
20	147.4	164.1	84.9	50.0	24.9	43.0
25	157.3	179.7	85.1	51.0	29.4	47.0
30	168.8	190.8	85.1	52.0	34.0	58.5
35	182.6	210.4	87.3	53.8	39.0	68.5
45	209.8	246.3	91.5	56.9	48.5	83.0

4) X_1 : Position of the reference sensor in the scanner

5) For ball runner blocks FNS, SNH, SNS

6) For ball runner blocks FLS, SLS, SLH

Ball Guide Rails with Measuring System

Steel Ball Guide Rails for mounting from above Accuracy class P

With cover strip and protective end caps R1605.62.1



With plastic mounting hole plugs R1605 .02 .1



Part number

Note: Please refer to the sections "Ordering System" and "Order Examples."

For mounting from above	
Size	
20	= 8
25	= 2
30	= 7
35	= 3
45	= 4


R16	<u>605</u>	<u>x x x</u>	<u>x 1</u>		
				1 =	Code for no. of sections
					(one-piece)
			623=	=	Guide rail with cover strip
	= 8				Sizes 20 – 30
	= 2				Accuracy class P
	= 7				
	= 3		626 =		Guide rail with cover strip
	= 4				Sizes 35 – 45
					Accuracy class P
			02 3 =	= G	iuide rail with mounting hole plugs, all sizes

R310EN 2350 (2007.07) | Integrated Measuring System for BRS and RRS

Scale Options

Referen	ce mark	(n)	Scale	e pitch	accura	су	Rail length	Reference mark position	T _{1A}
Without	Single	Distance coded	± 3	± 5	± 10	± 30	(max. 4000 mm)	For single reference mark only	(For asymmetrical rail ends)
00	01	02	01	02	03	04			

Additional ordering data for single reference mark

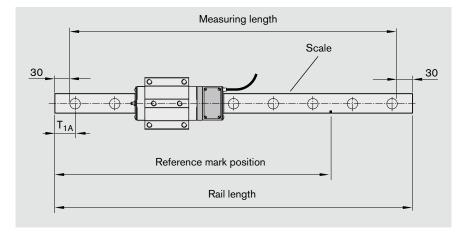

Integrated Measuring System for Roller Rail Systems

Steel Roller Runner Blocks

Preload C2 (8% C), C3 (13% C) Accuracy class SP

FNS R1851



FLS R1853



SLH R1824

SNH R1821







1) In preparation

Part number

Note:

Please refer to the sections "Ordering System" and "Order Examples."

Roller runner block version
FNS = 51
FLS = 53
SNH = 21
SNS = 22
SLS = 23
SLH = 24

$\begin{array}{c} R 18 x x \\ \hline \end{array} \begin{array}{c} x x 1 \\ \hline \end{array} \begin{array}{c} x x 1 \\ \hline \end{array} \begin{array}{c} 10 \\ \hline \end{array} \end{array}$

1 = Accuracy class SF
Preload
2 = C2 (8% C
3 = C3 (13% C
Size
3 =
4 =
5 =
6 =

Codes for runner block design styles

- **FNS** = Flanged, normal, standard height
- **FLS** = Flanged, long, standard height **SNH** = Slimline, normal, high
- **SNS** = Slimline, normal, standard height
- **SLS** = Slimline, long, standard height
- **SLH** = Slimline, long, high

R310EN 2350 (2007.07) | Integrated Measuring System for BRS and RRS

Scanner Options

Mounting side		Signa	l type a	nd re	esolut	ion	Cable length 1)	Connector ²)		Protect class	tion
Reference edge Roller runner block		1 V _{pp}	TTL (μ	m)			max. 3000 mm	12-pin Connei		IP 67	IP 67 plus ³)
Scale Reference edge at top	Scale		0.25	1	5	10	Preferred length 1000 mm	Connector male contacts	Coupling male contacts		
01	02	01	02	03	04	05		01	02	01	02

1) For cable length 3 m: voltage drop of 0.3 V

2) For precise details of connectors, see the section on Electrical Accessories.


3) IP 67 and resistant to metalworking fluids (tested with Curtis S90)

Recommendation for cable lengths:

For cable lengths > 1 m, use extension cable R1688 090 20 (see Accessories catalog).

Dimensions of roller runner blocks with integrated measuring system

To allow replacement, the scanner is mounted to the runner block via an adapter plate.

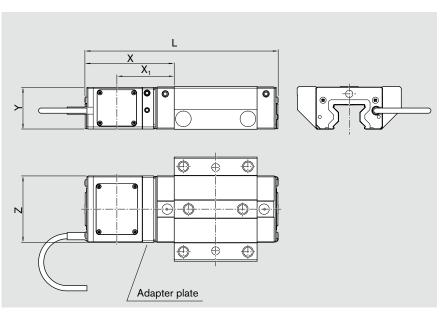

Size	Dimensions	(mm)				
	L ⁵⁾	L ⁶⁾	X	X ₁ ⁴⁾	Y	Z
35	186.0	210.0	85.9	55.1	40.0	63.8
45	216.2	248.7	90.8	58.2	50.0	78.0
55	250.3	289.3	100.5	64.3	56.4	91.4
65	288.6	336.6	107.9	72.0	75.0	119.0

4) X_1 : Position of the reference sensor in the scanner

5) For roller runner blocks FNS, SNH, SNS

6) For roller runner blocks FLS, SLH, SLS

Roller Guide Rails with Measuring System

Steel Roller Guide Rails for mounting from above Accuracy class P

With cover strip and protective end caps R1805 . 6 2 3 1



With plastic mounting hole plugs R1805 . 5 2 3 1



Part number

Note:

Please refer to the sections "Ordering System" and "Order Examples."

For mounting from above	
Size	
35	= 3
45	= 4
55	= 5
65	= 6

R1805	ххх >	(1)
		- —


1 = Code for no. of sections (one-piece	1 =	
2 3 = Guide rail with mounting hole plug Accuracy class F	3 =	52 3
2 3 = Guide rail with cover strip Accuracy class F	3 =	62 3

R310EN 2350 (2007.07) | Integrated Measuring System for BRS and RRS

Scale Options

Reference	ce mark (n)	Scale	e pitch	accura	су	Rail length	Reference mark position	T _{1A}
Without	Single	Distance coded	±3	± 5	± 10	± 30	(max. 4000 mm)	For single reference mark only	(For asymmetrical rail ends)
01	02	03	01	02	03	04			


Additional ordering data for single reference mark

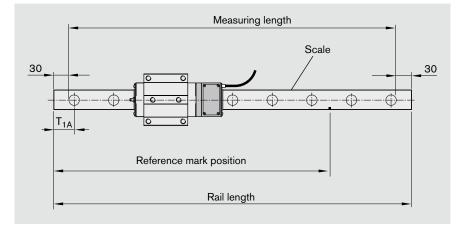

Integrated Measuring System for BRS and RRS | R310EN 2350 (2007.07)

Electrical Accessories

Connector Standard

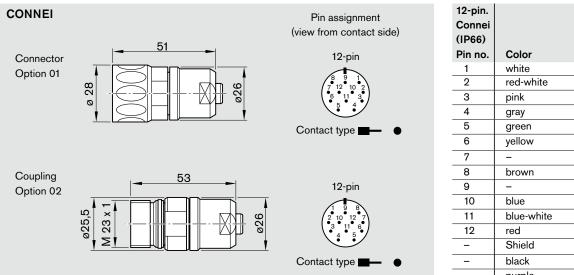

12-pin. Connei		
(IP66)		Signal
Pin no.	Color	assignment
1	white	B-
2	red-white	5V sensor
3	pink	RI+
4	gray	RI–
5	green	A+
6	yellow	A-
7	-	-
8	brown	B+
9	-	-
10	blue	OV
11	blue-white	0V sensor
12	red	+5V
-	Shield	Housing
-	black	-
-	purple	-

Cables Wire Assignment

Color assignment for standard cable (on scanner)

PUR cable, black

Cable structure


Cores:	5 x (2 x 0.05 mm²) + (2 x 0.14 mm²)			
Shield:	braided, galvanized, high-conductivity Cu wire - coverage			
	approximately 85 %			
Sheath:	PUR			
Color:	black			
Outside diameter (d): 5.0 ± 0.15 mm				

Mechanical properties (standard cable)

Bending radius for one-time bending (stationary): 5 x d (cable outside diameter) Bending radius for repeated bending (flexing installation): 10 x d Processing and operating temperature: -30°C to max. +90°C Shipping and storage temperature: -40°C to max. +90°C

Further accessories (on request)

- Digital display unit
- _ Precision sinusoidal amplifier
- TTL/HTL adapter _
- Extension cable

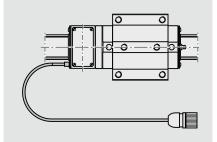


Mounting Instructions for Ball and Roller Runner Blocks

Always handle the measuring system with great care!

Mounting


Do not remove the mounting arbor, otherwise the rolling elements may be lost! Position the runner block on its mounting arbor against the end of the guide rail and carefully push the runner block off the mounting arbor and onto the guide rail.

Do not discard the mounting arbor. It will be needed again when removing the runner block.

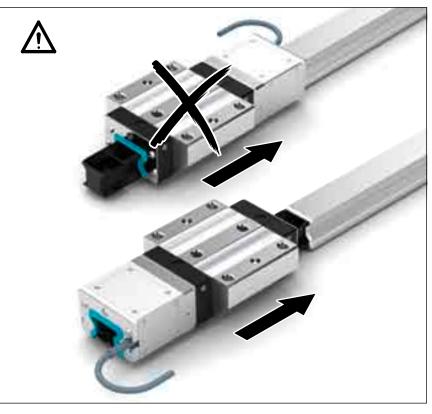

Removal

Position the mounting arbor against the end of the guide rail. Always slide the runner block directly onto the mounting arbor, otherwise the rolling elements may be lost! The removed runner block must remain on the mounting arbor!

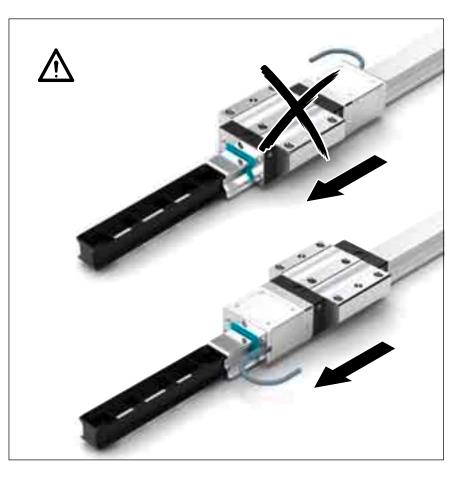

Mounting Instructions

Mounting the guide rails

Always handle the measuring system with great care!

To ensure that the repeatable accuracy of the measuring system is achieved upon assembly, the guide rails must be screwed down in sequence from the ends toward the center. Partial sections should be screwed down in the same way.

For more detailed information on mounting Ball Rail and Roller Rail Systems, as well as cover strips, see the following mounting instructions:

Screw installation sequence (example)



Note:

For guide rails with distance coded reference marks, the side with the reference marks is indicated by a hole in the reference edge of the guide rail (see page 7). The scale is located on the opposite side.




Maintenance Instructions


Lubrication

Ball Rail and Roller Rail Systems with Measuring System cannot be lubricated through the scanner.

The runner blocks can be easily lubricated using the free lube ports, as indicated by the arrows.

For more information on maintenance and lubrication, see the respective sections in the Ball Rail Systems catalog or the Roller Rail Systems catalog.

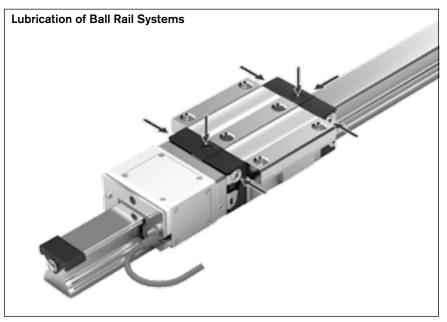

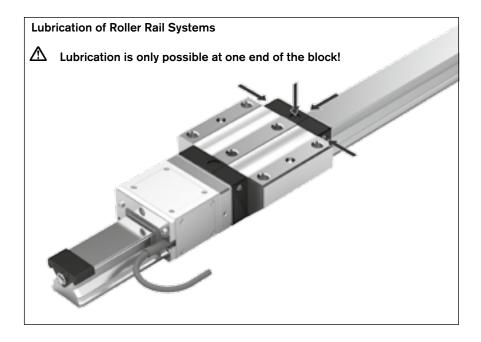

Safety notes

See "Instructions for Integrated Measuring System for Ball Rail and Roller Rail Systems" (R310EN 2386/2004-04).

Order Examples

Integrated Measuring System for Ball Rail Systems

Ball runner block

Order Examples		Description
Integrated measuring system	n runner block R1681	Ball runner block with integrated measuring system
Runner block	= R1651 722 20	Ball runner block FNS size 30, accuracy class P, preload C2, (8%) without ball chain
Mounting side	= 01	Reference edge of runner block at top
Signal type	= 03	TTL with 1 μm resolution
Cable length	= 1000	Cable length 1000 mm
Connector	= 01	12-pin Connei connector with male contacts
Protection class	= 01	Enclosure protection class IP 67

Ball guide rail

Ordering data		Description
Integrated measuring system guid	le rail R1685	Ball guide rail with integrated measuring system
		Ball guide rail with cover strip and protective end caps, size 30, accuracy class P
Reference mark	= 01	Single reference mark
Accuracy	= 03	Scale pitch accuracy ± 10 μm
Rail length	= 3836	Rail length 3836 mm
Reference mark position	= 1700	Reference mark position: 1700 mm from end face of rail
T _{1A}	= -	T _{1A} : symmetrical spacing

Integrated Measuring System for Roller Rail Systems

Roller runner block

Order Examples		Description
Integrated measuring syst	em runner block R1881	Roller runner block with integrated measuring system
Runner block	= R1851 431 10	Roller runner block FNS size 45, accuracy class SP, preload C3 (13%)
Mounting side	= 01	Reference edge of runner block at top
Signal type	= 03	TTL with 1 μm resolution
Cable length	= 1000	Cable length 1000 mm
Connector	= 01	12-pin Connei connector with male contacts
Protection class	= 01	Enclosure protection class IP 67

Roller guide rail

Ordering data		Description
Integrated measuring system g	uide rail R1885	Roller guide rail with integrated measuring system
Guide rail	= R1805 462 61	Roller guide rail with cover strip and protective end caps, size 45, accuracy class P
Reference mark	= 01	Single reference mark
Accuracy	= 03	Scale pitch accuracy ± 10 μm
Rail length	= 3836	Rail length 3836 mm
Reference mark position	= 1700	Reference mark position: 1700 mm from end face of rail
T _{1A}	=-	T _{1A} : symmetrical spacing

Inquiry/Order Form

Bosch Rexroth AG	Telephone	+49 9721 937-0
D-97419 Schweinfurt	Telefax (direct)	+49 9721 937-250

Germany


To be completed by customer: Inquiry \Box / Order \Box

Runner block with integrated measuring system

Integrated measuring system runner block				
Runner block				
Mounting side				
Signal type				
Cable length				
Connector				
Protection class				

Guide rail with integrated scale

Integrated measuring system guide rail				
Guide rail				
Reference marks				
Accuracy (scale pitch)				
Rail length				
Reference mark position				
T _{1A}				

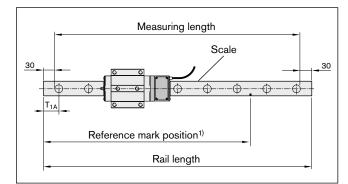

1) For specification of reference marks, please refer to "Technical Data," section "Single absolute reference mark."

Quantity Comments:	Order of: pcs	s, per month,	per year, per order, or
From			
Company:			Name:
Address:			Department:
			Telephone:
			Telefax:



Bosch Rexroth AG Linear Motion and Assembly Technologies Ernst-Sachs-Straße 100 97424 Schweinfurt, Germany Tel. +49 9721 937-0 Fax +49 9721 937-275 www.boschrexroth.com/brl

Australia

Bosch Rexroth Pty. Ltd. 3 Valediction Road Kings Park, NSW 2148, Sydney Tel. +61 2 9831 7788 Fax +61 2 9831 5553

Great Britain

Bosch Rexroth Limited Cromwell Road St. Neots, Huntingdon Cambs. PE19 2ES Tel. +44 1480 223 298 Fax +44 1480 470 789

Canada

Bosch Rexroth Canada Corp. 3426 Mainway Drive Burlington, Ontario L7M 1A8 Tel. +1 905 335-5511 Fax +1 905 335-4184

USA

Bosch Rexroth Corporation 14001 South Lakes Drive Charlotte, NC 28273 Tel. +1 800 REXROTH +1 800 739 7684 Fax +1 704 583 0523

Singapore

Bosch Rexroth Pte. Ltd. 15D Tuas Road 638520 Singapore Tel. +65 6861 8733 Fax +65 6861 1825

Your sales partner

Subject to technical modifications

© Bosch Rexroth AG 2007 Printed in Germany R310EN 2350 (2007.07) EN • BRL/MKT2